

Technical Data

OIL TANK WATER EXTRACTION UNIT



Applies to the following models **only**:

3008108-B

Please read carefully before commencing installation



ANGLO NORDIC BURNER PRODUCTS LTD, 12/14 Island Farm Avenue,
West Molesey, Surrey KT8 2UZ, UK
Tel: +44 (0) 208 979 0988 Fax: +44 (0) 208 979 6961 email: sales@anglonordic.co.uk
Web: www.anglonordic.co.uk

PRODUCT DESCRIPTION

- Use to remove water from fuel storage tanks.
- Liquid is discharged directly into the 6L vessel.
- Supplied with 6m of tubing.
- For use in tanks used to store kerosene, gasoil, diesel & biofuels.
- Max operating temp. 30C.
- Maximum working vacuum -0.7 BAR.
- Maximum lift is 3 meters.

IMPORTANT WARNING NOTES:

1. Always press the PUSH button to release any pressure and to reset the gauge to ZERO before operating.
2. After each use press the PUSH button to release pressure inside the vessel.
3. Do not use the vessel to store corrosive or highly flammable liquids.
4. Do not connect the product to an air compressor.
5. When the pressure gauge is in the Red area (10-15PSI) the pressure will be released to the normal area. This is designed for safety.

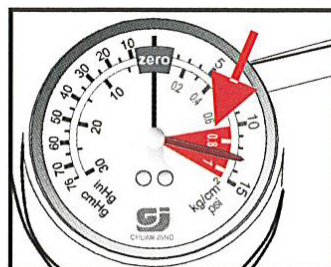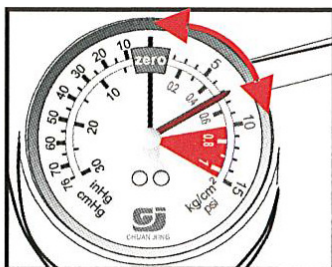


Indicator normal area. Indicator dangerous area.

6. If the pressure is too high press the PUSH button to release pressure inside the unit.


OPERATION INSTRUCTIONS

TO EXTRACT WATER FROM FUEL STORAGE TANK:


1. Press the PUSH button to reset the gauge to ZERO before operating.
2. Move the lever on the pump to the IN position.

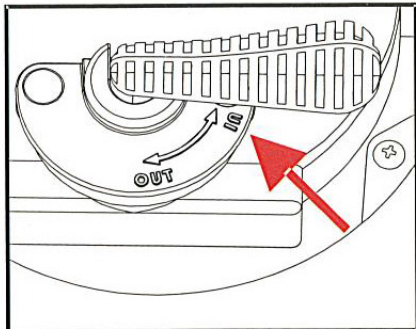


3. Drop the end of the suction tube, with the brass weight fitted, into the fuel storage tank until the weight is resting at the lowest point of the tank.
4. Connect main suction tube into the pump.

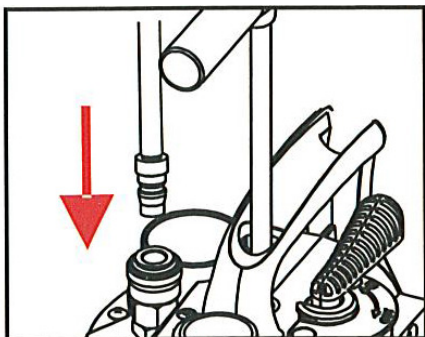

5. Pump the handle up and down to start the vacuum. The fluid will be extracted automatically.

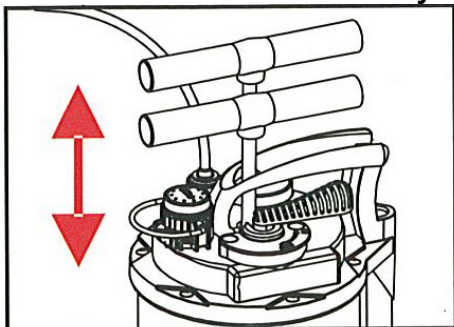


6. Pressure gauge indicator should move in anticlockwise direction.

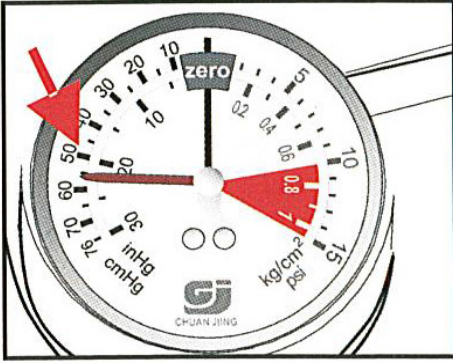


TO DISCHARGE FLUID FROM VESSEL:


1. Press the PUSH button to reset the gauge to ZERO before operating.
2. Move the lever on the pump to the OUT position.

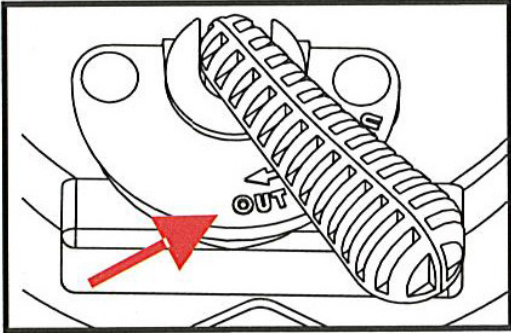



3. Pump the handle up and down to discharge the fluid.

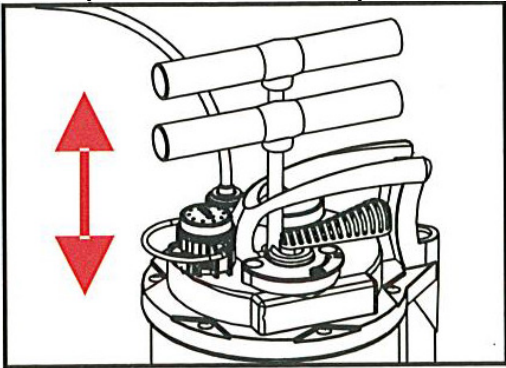


4. Pressure gauge indicator should move in anticlockwise direction.

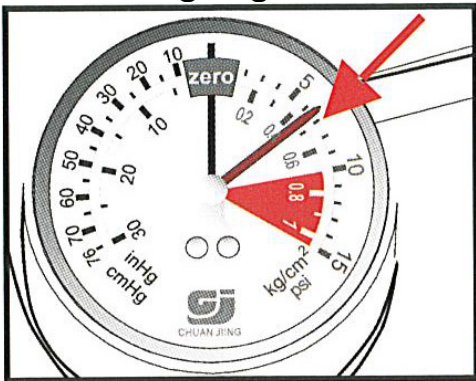

5. If discharging thick fluid then we recommend that you rotate the PUSH button anticlockwise and pour it out from outlet.

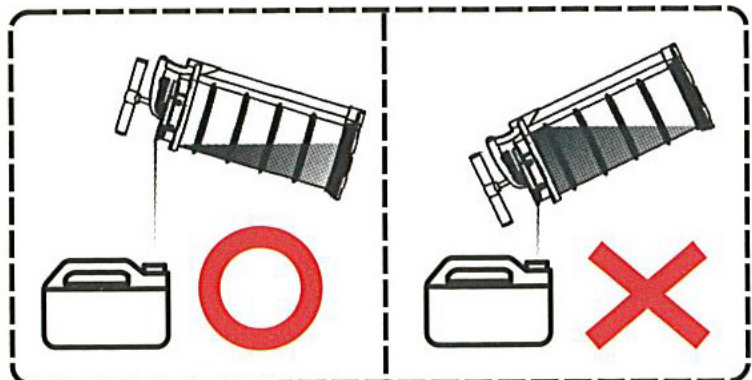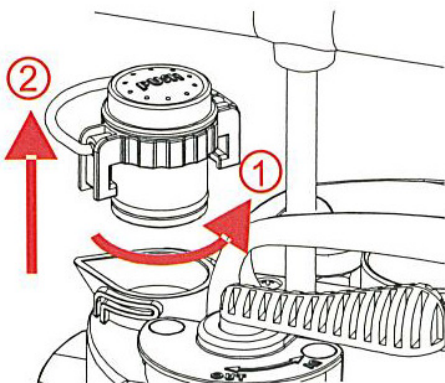

SPARE PARTS

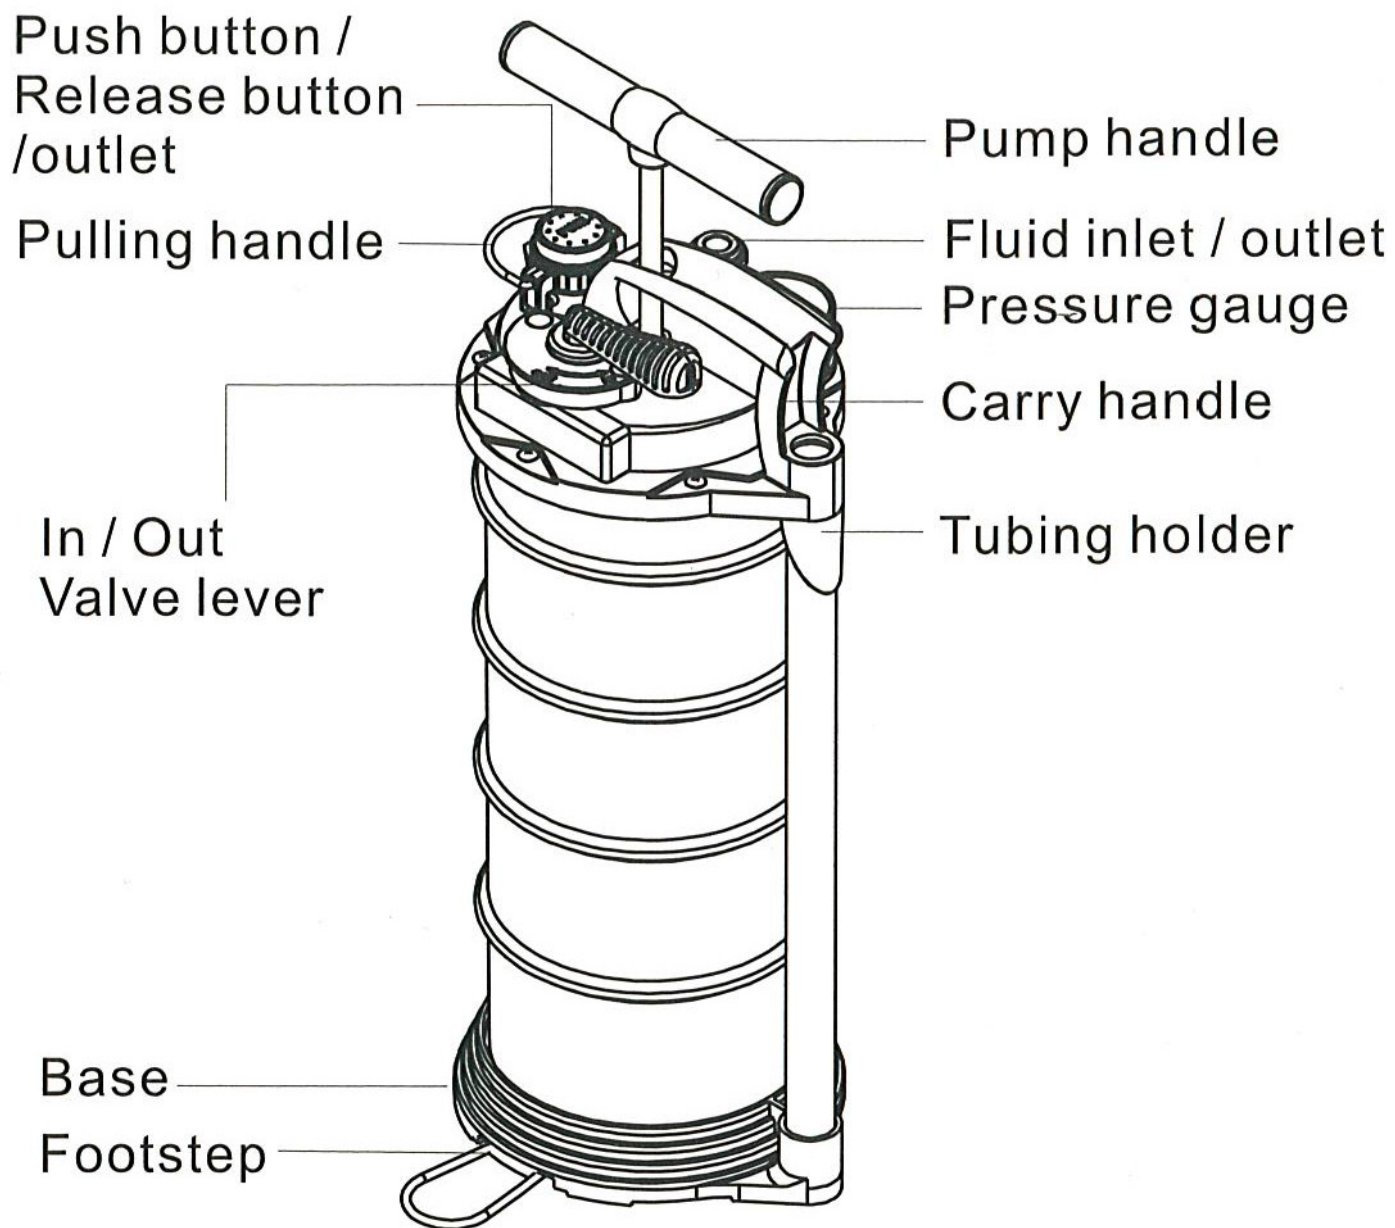

ANGLO NORDIC BURNER PRODUCTS LTD, 12/14 Island Farm Avenue,
West Molesey, Surrey KT8 2UZ, UK
Tel: +44 (0) 208 979 0988 Fax: +44 (0) 208 979 6961 email: sales@anglonordic.co.uk
Web: www.anglo-nordic.com